



RT777PRO Battery Tester Quick Setup Guide

How to Personalize Battery Test Printout:

1. After installing AA batteries, connect battery tester to a 12-volt battery
2. On the menu screen, scroll to and select "Customize"
3. Enter up to 2 lines and 16 characters per line of personalized store information, spaces do count as a character (ex. Name of store, phone number, etc.)
4. Once customization is complete, perform a battery test; once test is complete, print receipt to confirm that your selected customized wording at bottom of receipt is correct
5. If customized wording is not correct, please repeat steps 2-4

How to Operate Battery Tester:

Step 1. Connect battery tester to the battery terminals

Step 2. Select the type of test you would like to perform "BATTERY TEST", "SYSTEM TEST", Or "IN VEHICLE TEST" (Does Both System and Battery Test Together) and press <<Enter>>

Step 3. Select battery type "REGULAR LIQUID", "AGMF", "AGMS", "VRLA/GEL" and press <<Enter>>

Step 4. Select battery rating "*SAE / CCA", "EN", "IEC", "DIN" (***note SAE & CCA are same**) and press <<Enter>>

Step 5. Select battery CCA and press <<Enter>>

Step 6. Device will begin testing battery (if battery is below 8V tester will ask if battery is charged?)

Step 7. Tester will display test results SOC (State of Charge) / SOH (State of Health) press <<Enter>>

Step 8. Tester will display test code press <<Enter>>

Step 9. Select "YES" or "NO" to print test results press <<Enter>>

Battery Tester Warranty:

12 Month Limited Warranty

Need Replacement Cables?

To order replacement cables part # 324BT1000000, please contact your supplier or Legacy Partners Associates at 1-844-294-6280 or sales@lpassoc.com

For further questions regarding your DHC battery tester refer to your owner's manual or contact our customer service at:

Phone: 1-844-294-6280

Email: service@lpassoc.com

Website/Videos: www.dhctesters.com